


Center-Drain Fill Instructions

1. Remove liner cassette from box, unfold, and drape cassette over the front (side containing bottom access) wall of the A330 tote with the bottom fitment facing out. **Do not remove cardboard.** Remove bubble-wrap from black clip on the bottom fitment.



2. Remove cap from top fitment and insert either AP3030 (tri-clamp) or AP3023 (cam-lock) adaptor.

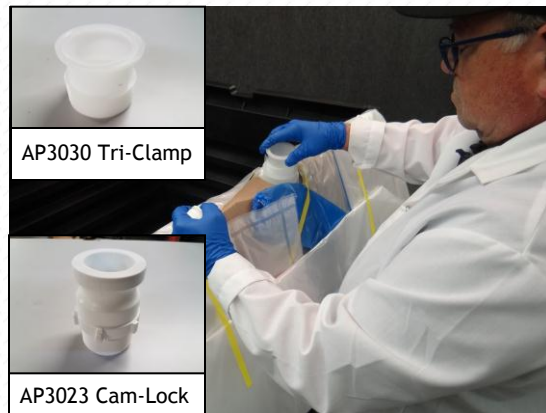

3. Connect filling hose to adapter and lower cassette into A330 Shipper so that the black clip aligns with the bottom access.



4. Reach through bottom access of A330 shipper, grab hold of bottom fitment clip, and align side prongs so that both tips are inside the gap. Pull one side until it snaps into place, then pull the other. If engaging the bottom clip presents a challenge, an AP3214 Cap Puller can be used to facilitate the process.



5. Begin filling. Once full, disconnect hose, remove adapter, and replace cap on top fitment.